

Auto Air conditioning System Refrigerant Recharge Service Near me.

Refrigerant charge

Type	HFC-134a (R-134a)
Capacity	0.40 Kg (0.88lb)

Auto Air conditioning System Refrigerant Recovery and Evacuation

1. Connect recovery/recycling/recharging equipment to the A/C service valves.
2. Evacuate auto air conditioning system for 25 minutes or more.
3. Pull a Deep Vacuum on the A/C system.
4. Charge the specified amount of refrigerant to vehicle A/C system.
5. Check that A/C system operates normally.
6. Install A/C service Valve caps.
7. Refrigerant charge service is complete.

Auto A/C Repair LLC. automotive air conditioning specialist on site service.

If you need assistance recharging the a/c system in your vehicle Call Today and request a Refrigerant Recharge service.